

# WT-138 INSTRUCTION MANUAL

Figure A.



## Installation:

1. Pull out the battery compartment and insert 2PCS new AA (1.5V) alkaline batteries.
2. Hold the unit steady. Screw the collar onto the faucet/tap; then tighten the locking collar by hand. Turn on the faucet/tap.  
DO NOT USE ANY WRENCH OR PLIERS.

## Operation:



There are 14 pre-programs optional :

- Watering 3 mins, 5 mins, 10 mins, 15 mins every 12 hours
- Watering 5 mins, 10 mins, 20 mins, 30 mins every 24 hours (every day)
- Watering 10 mins, 20 mins, 30 mins every 48 hours (every 2 days)
- Watering 15 mins, 30 mins, 60 mins every week (every 7 days)

Turn the knob to the position for the preferable run time and frequency, then the program setup is completed. It will start watering immediately.

If turn to a new setup, it starts the new program watering immediately.

## Manual ON/OFF function:

At any time you can use the manual ON/OFF function.

While you revolve the knob to ON position, red light flashes 1 time, the valve will open continuously (max. 30 minutes and turn off automatically).

Turn knob to OFF position manually, the valve will turn off immediately.

## Trouble – shooting guide:

1. If the water cannot come out, please check the following.
  - a. The faucet / tap should be turned ON.
  - b. Make sure your batteries are in good condition.
  - c. Fast knob turning could cause the missing of program reading.
2. If the timer is still not working, please contact the store for further checking and assistance.

## Technical data:

1. Min. operation pressure: 0 bar
2. Max. operation pressure: 8 bar
3. Max. water temperature: 40°C (104°F)

## Particular warnings:

1. Timer for garden watering use only. DO NOT use for supplying chemicals or drinking water.
2. DO NOT leave the device exposed to low temperatures (snowing days)
3. Batteries should be removed from the timer at the end of the watering season or before long idle time (i.e. several weeks or more) and replaced with new alkaline batteries each season.
4. Rechargeable batteries must not be used.

## Low battery indicator:

While the low battery indicator light remains on continuously, the valve will be shut off & locked automatically. Please replace with 2 new alkaline batteries for the timer.